

Installation instruction - Translation

Agile X IS

10.1" Tablet PC

Installation of the Windows 10 IoT **Enterprise operating system** (BARTEC version)

- **General information**
- **Notes for installation**
- Installation of the operating system

Document-No.: 11-A1B0-7N0002

Status: December 2021

Reservation: Technical data subject to change without notice. Changes, errors and misprints may not be used as a basis for any claim for damages.

GERMANY

Fon: +49 7931 597-0

Support: Download: Internet:

em-support@bartec.com http://automation.bartec.de www.bartec.com

Table of content

Agile X IS

Installation instruction: Windows 10 IoT Enterprise operating system

1	Basic safe	ty information	2	
		Information on this Installation instruction		
	1.2	Co-applicable documents	2	
2	Notes for installation			
	2.1	Requirements	3	
3	Installation of the operating system			
	3.1	Installation with Standard non-Ex USB stick	Δ	
	3.2	Installation with Bartec Ex-i USB stick	7	

1 Basic safety information

1.1 Information on this Installation instruction

T

Read carefully before commissioning the device.

The Installation instruction is an additional description of the available user manual and part of the device.

The Installation instruction is directed at all persons who are entrusted with handling the device. Knowledge of the safety manuals and warnings in this installation manual and strict compliance with them is essential for safe handling.

- Carefully read the installation manual and especially the safety manuals before using the device.
- Make the installation manual accessible to all people who are entrusted with handling the device.

Safety and warning information is particularly emphasised in this Installation instruction and marked by symbols.

ATTENTION

ATTENTION describes a possibly damaging situation. If not avoided, the plant or objects in its vicinity may be damaged.



Important information on effective, economical & environmentally compliant handling.

1.2 Co-applicable documents



All documents are available online from the following websites: www.bartec.com or http://automation.bartec.de/mobileE.htm

Document	Explanation
User manual Tablet PC Agile X IS	This User manual describes the use of the Tablet PC Agile X IS.
Quick Start Guide Tablet PC Agile S NI	This Quick Start Guide describes the safety- related information, first use and further data of the Tablet PC Agile X IS

2 Notes for installation

ATTENTION

Property damage through interrupted power supply!

- Verify that Tablet PC is running on AC power during the entire update process. Do not unplug the AC adapter or any other connected external devices during the update process.
- ▶ Do not perform any actions on the Tablet PC during the installation that could interrupt the installation process. Do not restart or turn off the Tablet PC during the installation as it may cause permanent damage to the Tablet PC.

The instructions in this Installation instruction are valid for following devices and operating system version

Device	Tablet PC Agile X IS Type: 17-A1B*-****/********	
Operating system	Windows 10 IoT Enterprise LTSC	
Operating system version	Version 2019 Build 1809	
Operating system name BARTEC	XISLTSC19R01	
Build number BARTEC	113	

2.1 Requirements

Requirements for the Agile X IS series to install the operating system:

- 1. Tablet-PC Agile X IS
- 2. Docking Station 03-9914-0022 for Tablet PC Agile X IS (recommended)



- 3. Power supply 03-9911-0040
- 4. AC power cable
- 5. USB stick with operating system

Standard non-Ex USB stick (8 GB or higher)

Attention: A standard non-Ex USB stick must **not be used** on the Ex i USB port of the Agile X IS!

Alternative:

USB stick (Ex i; 8 GB) with the Windows 10 IoT Enterprise operating system of BARTEC

3 Installation of the operating system

This installation of the Windows 10 IoT Enterprise operating system can be process in two ways, depending on the prepared USB stick (standard non-Ex USB stick or Bartec Ex-i USB stick.

Note:



First you need to prepare a bootable installation USB stick with the required BARTEC operating system image.

Manual for preparation is available as separate manual on BARTEC download page: https://automation.bartec.de/tabletpcE.htm

- Select the device.
- Go to register card "Tools".

3.1 Installation with Standard non-Ex USB stick

1. Insert the Tablet-PC in the docking station and connect the power supply.



2. Plug the standard non-Ex USB stick with the operating system into a USB port of the docking station.




Agile X IS

Installation instruction: Windows 10 IoT Enterprise operating system


3. Press the Power button, to boot the Tablet-PC.



The Microsoft Deployment Kit starts automatically.
 Click "Run the Deployment Wizard to install a new Operating System" to start the installation.

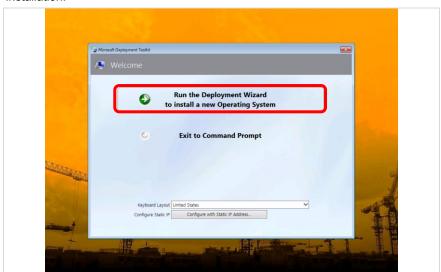

The Installation Progress starts.
 The installation of the OS needs approx. 10-15 minutes.

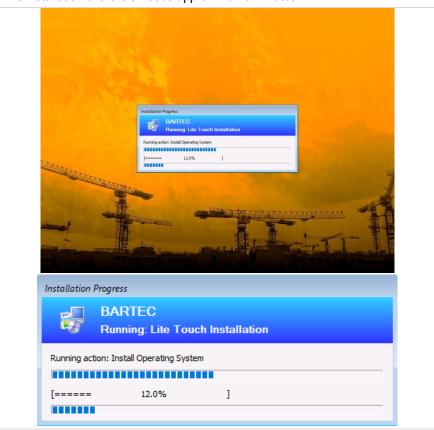

- 6. After the installation has finished, the Tablet-PC turned off automatically.
- 7. Remove the USB stick from the docking station.
- 8. Start the Tablet-PC.

After startup, the standard Microsoft setup screen appears for the initial setup of the device.



3.2 Installation with Bartec Ex-i USB stick

1. Insert the Tablet-PC in the docking station and connect the power supply.




2. Plug the Bartec Ex-i USB stick with the operating system into the USB port of the Tablet-PC.



3. Press the Power button, to boot the Tablet-PC.




The Microsoft Deployment Kit starts automatically.
 Click "Run the Deployment Wizard to install a new Operating System" to start the installation.

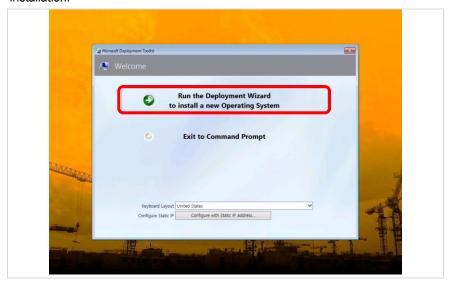

Agile X IS

Installation instruction: Windows 10 IoT Enterprise operating system

The Installation Progress starts.
 The installation of the OS needs approx. 10-15 minutes.

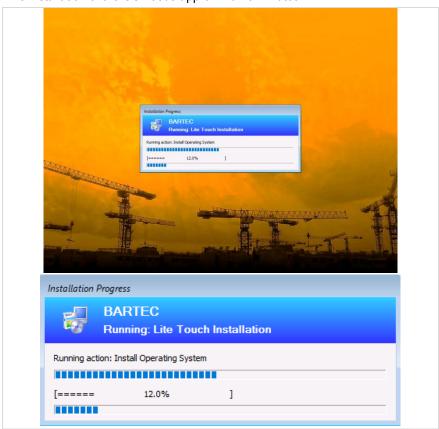

- 6. After the installation has finished, the Tablet-PC turned off automatically.
- 7. Remove the USB stick from the Tablet PC.
- 8. Start the Tablet-PC.

After startup, the standard Microsoft setup screen appears for the initial setup of the device.

